

MEASURING OF THE CAR'S WING MIRROR.

1

Measure the height of the mirror housing.
Maximum height is 24 cm.




2

Measure 14 cm from the outside of the mirror housing.
Keep a finger at the 14 cm spot.



3

At the 14 cm spot, measure the depth of the mirror housing perpendicular.
It is important that the depth of the mirror housing is measured correctly.

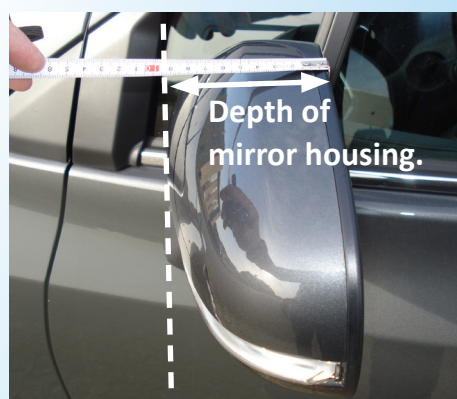

Mirror arm size 2 / item number 2 can be used for wing mirrors with a depth of minimum 7 cm and maximum of 10 cm.

Mirror arm size 3 / item number 3 can be used for wing mirrors with a depth of minimum 10 cm and maximum of 12,5 cm.

Info: If the wing mirror is higher than 24 cm or deeper than 12.5 cm, the 4 Point Towing Mirror **cannot** be used.

Our gallery at www.brunsgaard.eu. shows a few cars, where the arm is mounted and the arm size is mentioned.

MEASURING 2019

www.BRUNSGAARD.eu